

XHELIX DELUXE DJI EPIC SKIN

A S S E M B L Y G U I D E



STEP 1

To help you place the kit, you can use tweezers similar to the ones in the following image:



Take the following part of the kit and place it where indicated:



Before placing it, make sure that you center it perfectly, leaving the same separation in all the corners.

Don't press on the vinyl until you are sure you have perfectly placed it in the center. Once you are sure that it is okay, press it against the glasses.

**If there are any wrinkles left, don't worry,
At the end of the guide we will tell you how to remove it.**

STEP 2

Select the next part of the kit



As in the previous step, place it over the glasses trying to make it as centered as possible. If you think it has been well centered, apply pressure to fix it to the goggles.

If it has not been well you can take it off carefully and try again until it is the best it can be.

STEP 3

Select this part of the kit and just follow the instructions in the steps above




STEP 4

Select this part of the kit and just follow the instructions in the previous steps



STEP 5

Select one of the following pieces and place it in the indicated place, then repeat the process with the other

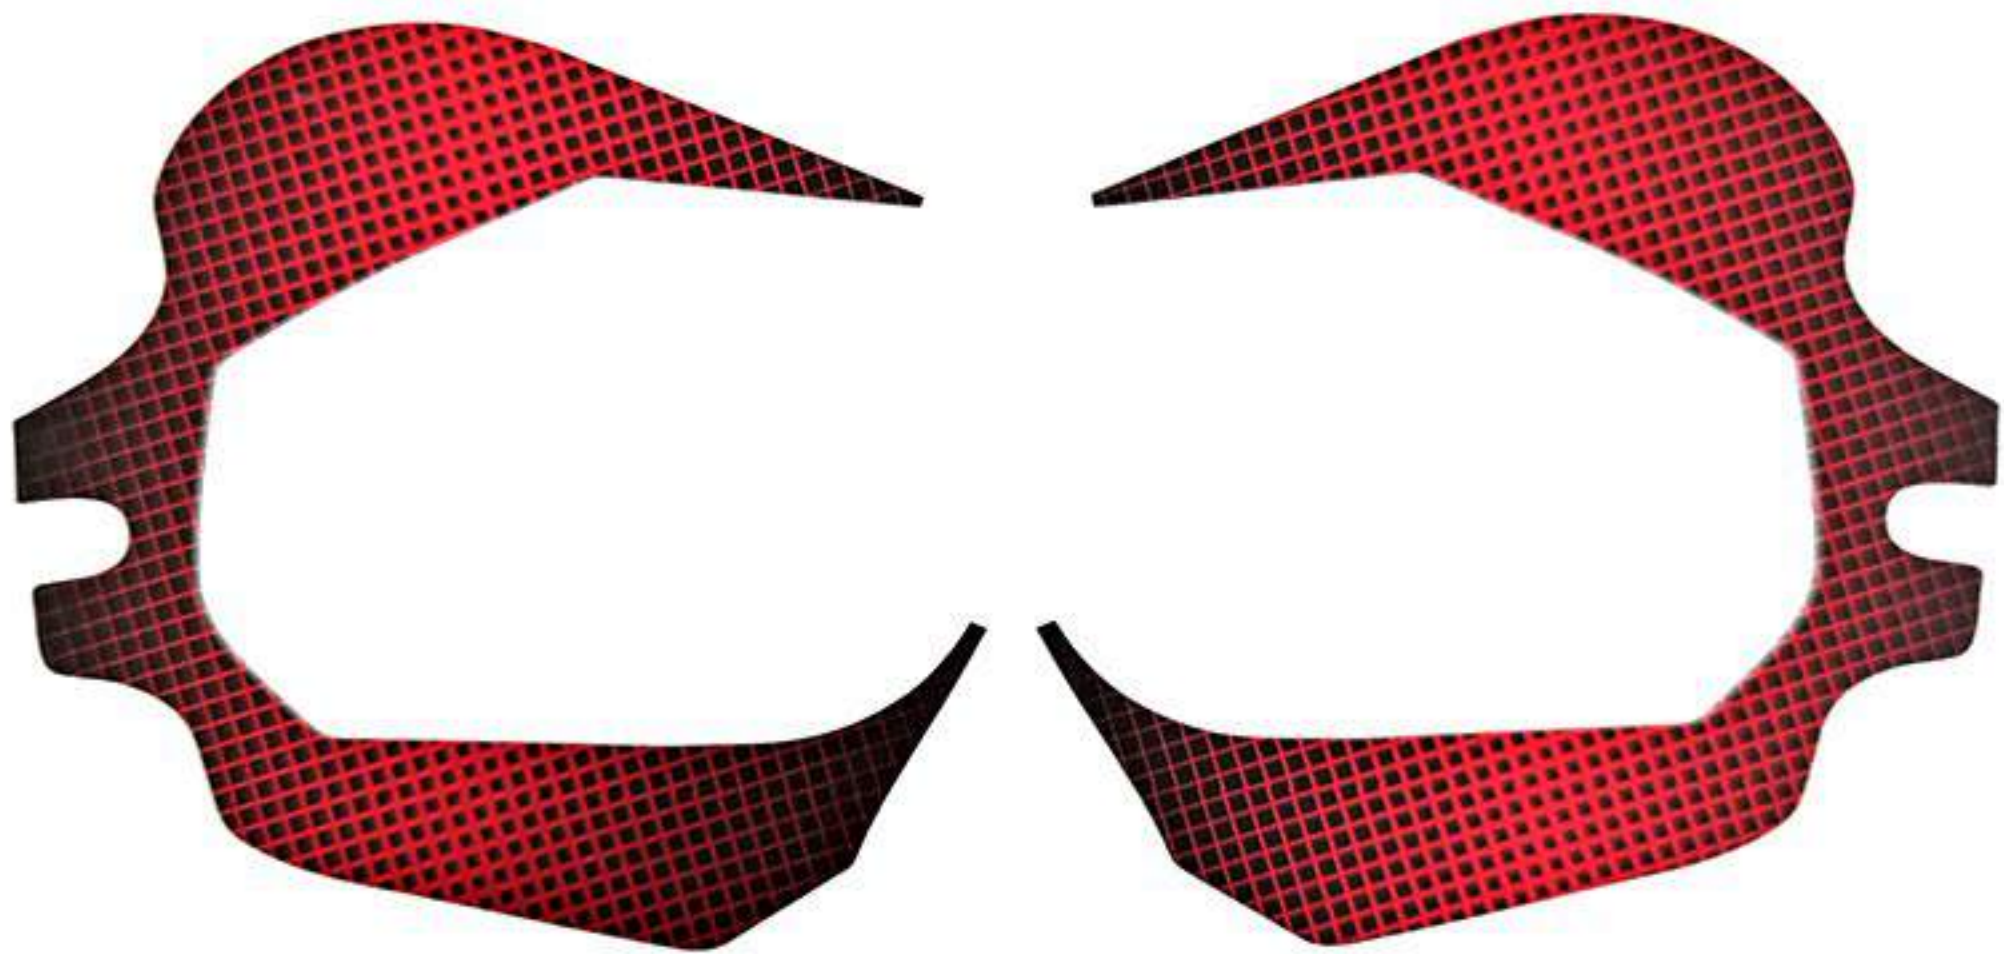

Place this piece starting to glue it from the outside of the goggles to the center.

Remember to place it as centered as you can, this will make the end result look much better.

When it is well positioned, apply pressure with your fingers until it is correctly fixed in position.

STEP 6

Place the next piece where indicated




STEP 7

Do the same with this part of the kit



STEP 8

Take one of the following pieces and put it where it belongs

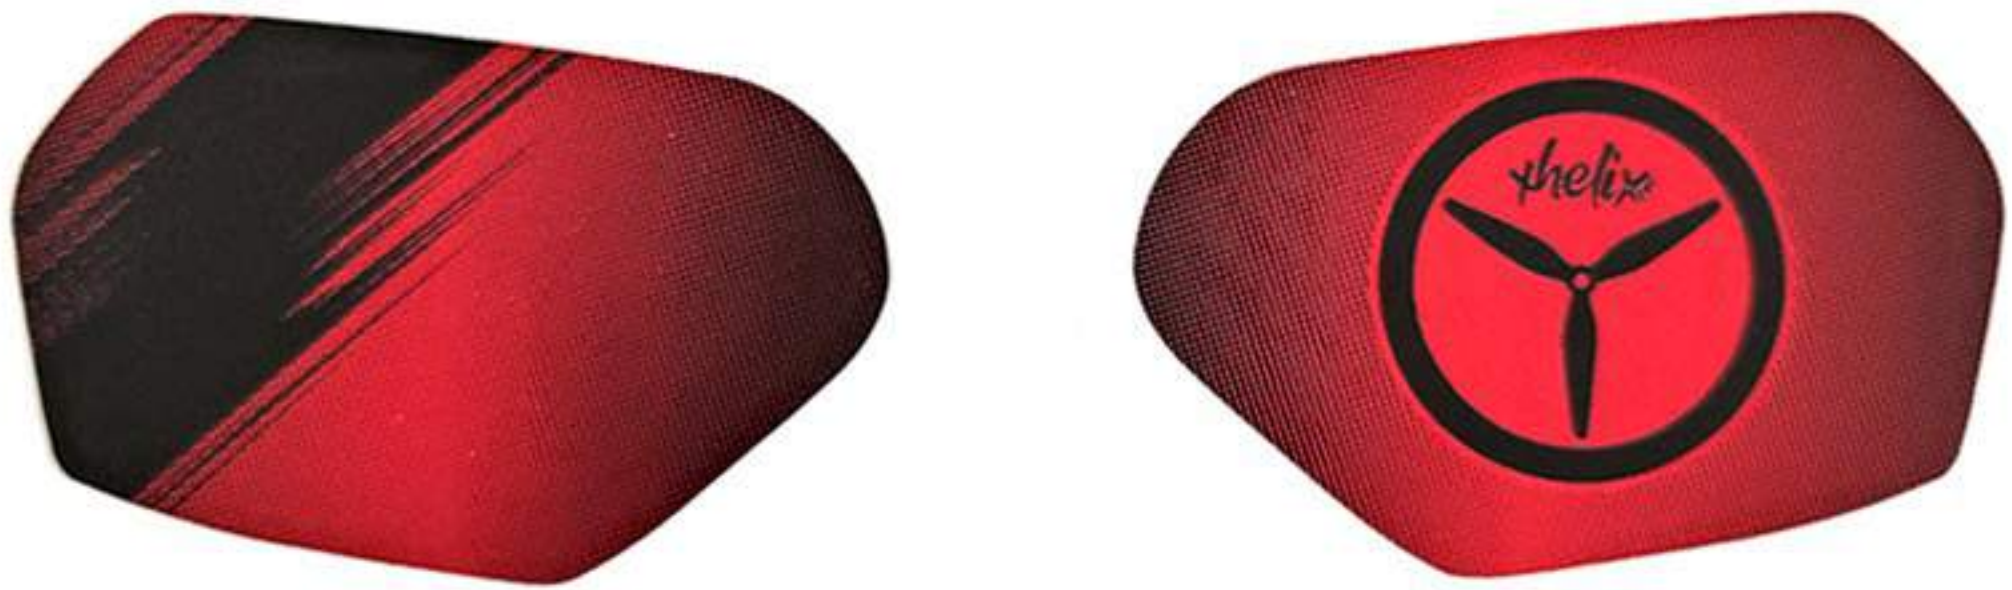

This part is especially important to be positioned as centrally as possible.

You should try to leave the same distance between this piece and the next one, so that there is a black space between the pieces like the one you see in the following image.



STEP 9

You're almost done! place the vinyl on the antennas as seen in the next photo.



If instead of using the original antennas you have the TrueRC X-Air antennas, skip this step and go to the next one.

STEP 10

If you have the TrueRc X-Air take these pieces and place them as indicated below.



FINAL STEP

Once the entire kit is in place, check if it has any wrinkles. If so, grab a blow dryer and give the wrinkle some hot air. Then press with your finger until it disappears completely.

If you have done it correctly as indicated in this guide, you should have a result as good as this.



If you have any questions, remember that we are at your disposal at www.xhelixfpv.com

Thank you very much for purchasing our products.